

SolShare 2 Quick Start Guide

for SOLSHARE-2.0-ANZ





NOTICE

SolShare 2 installation manual




Always consult the SolShare 2 installation manual at <https://hubs.li/Q03YQgwP0> for full safety warnings and installation and commissioning detail.

About SolShare

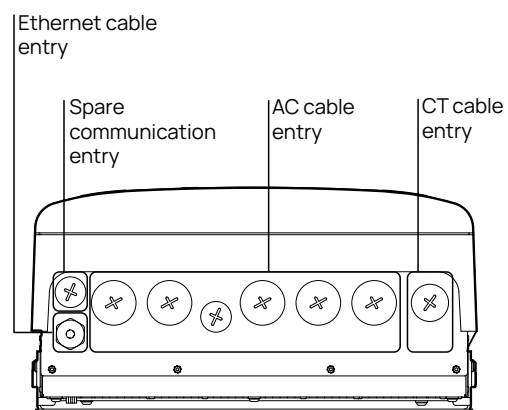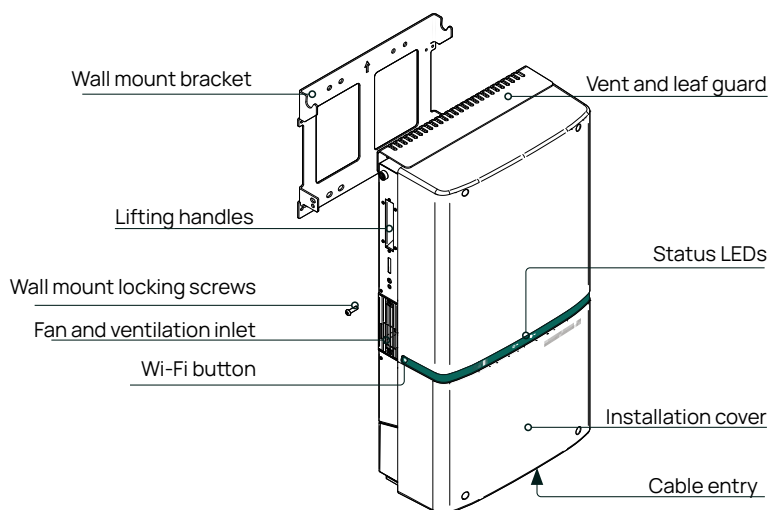


Example SolShare Installation

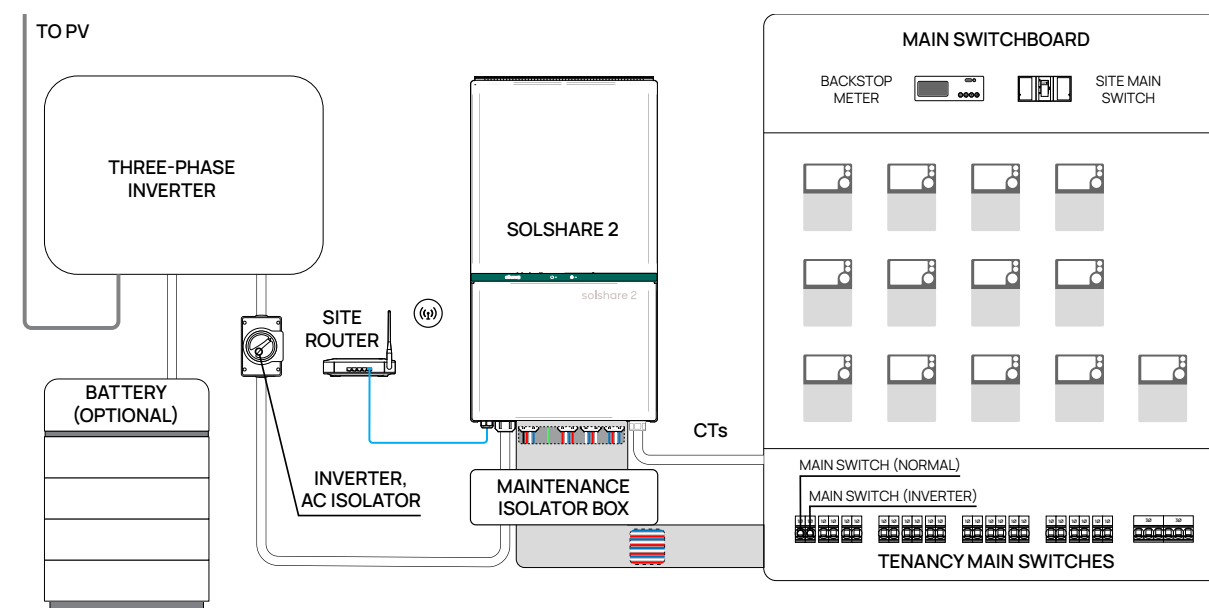




Mounting SolShare

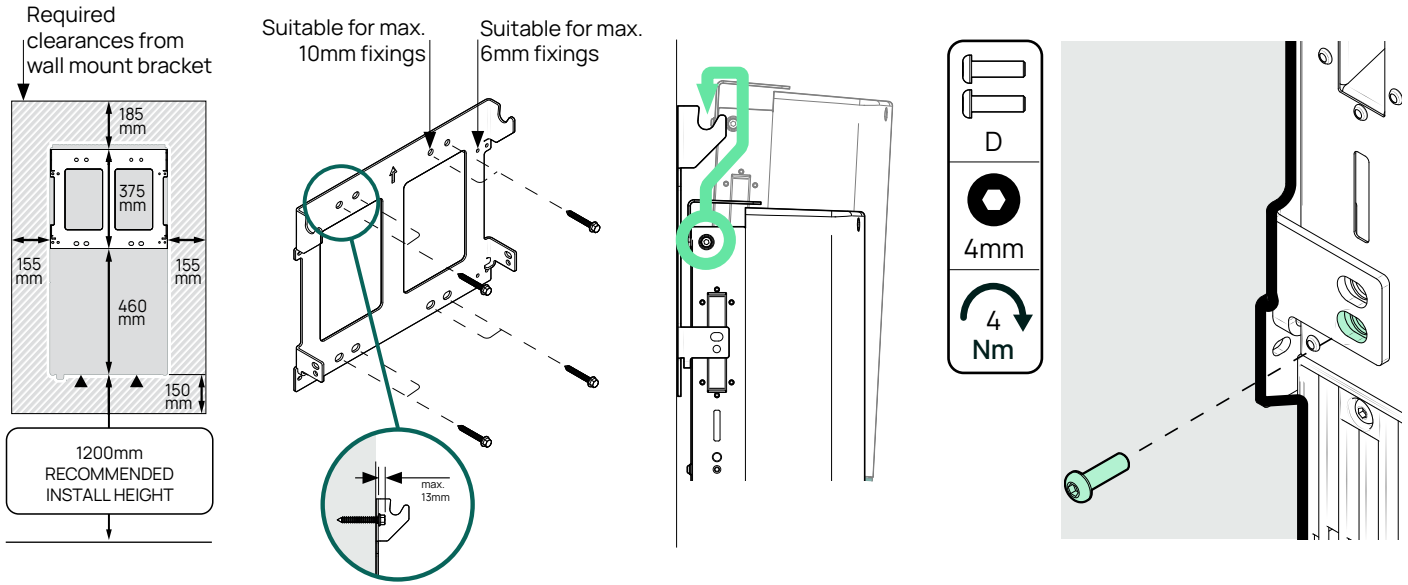


AC electrical connections


Maintenance isolator box

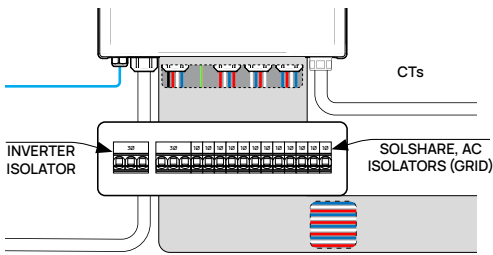

At SolShare

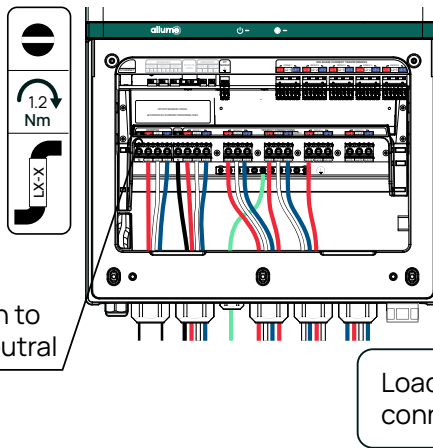


At Switchboard

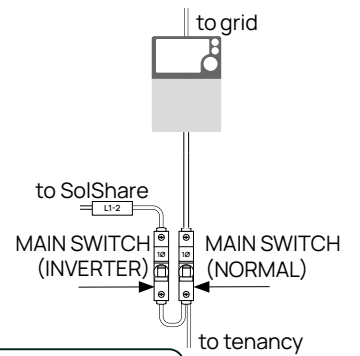


Current transformers

At SolShare

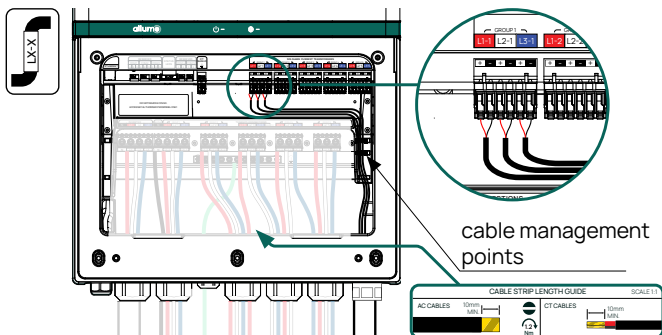


At Switchboard

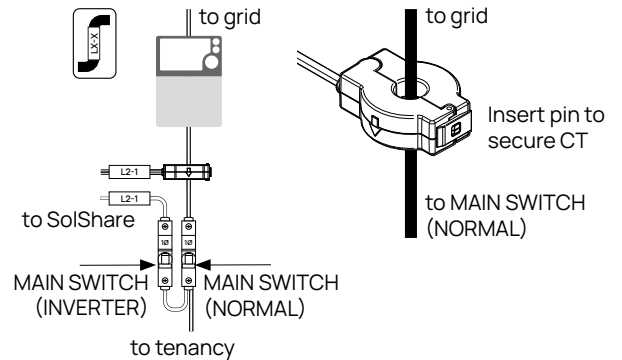


Extending CT cables

Type	Shielded twisted pair (shielded CAT6 or instrumentation cable recommended)
Min gauge	0.25 mm ²
Max gauge	2.5 mm ²
Max length	100m per CT (including cable provided with CT)

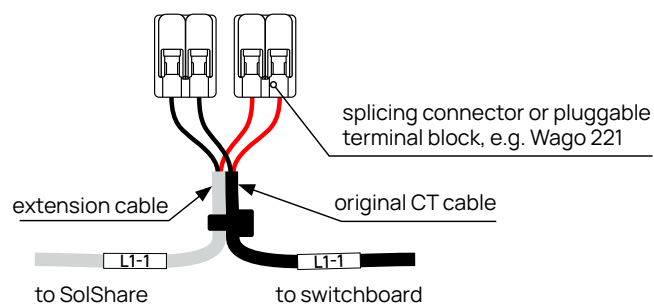

Earthing CT extension shielding

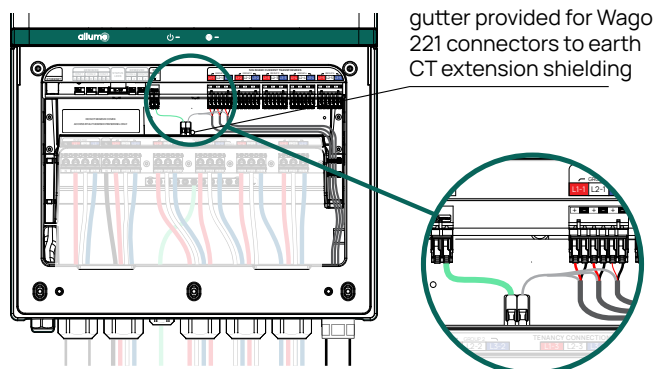


Internet preparation

Internet protocol	IPv4
Forward/open ports	TCP 80, 8883, 443 UDP 53, 123
Data requirement	Typically < 250MB / month / SolShare

Ethernet

Plug type	RJ45
Cable	Ethernet cable, e.g., Cat5e/6/6a

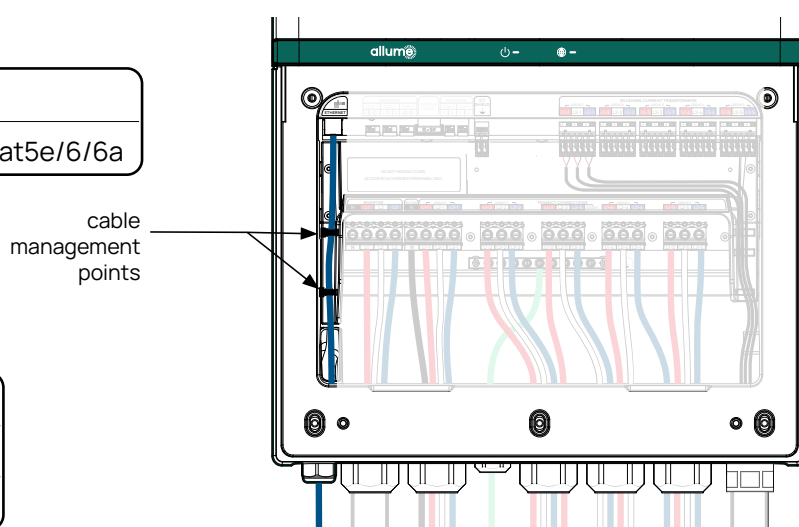

Wifi

Network frequency	2.4GHz
Compatible protocols	802.11 b/g/n
Encryption	WPA2

