


# 3 Pole isolator SolShare SLD Example - **GUIDANCE ONLY**

**GUIDANCE NOTE :**  
Installation must fully conform to BS7671 Wiring Regulations

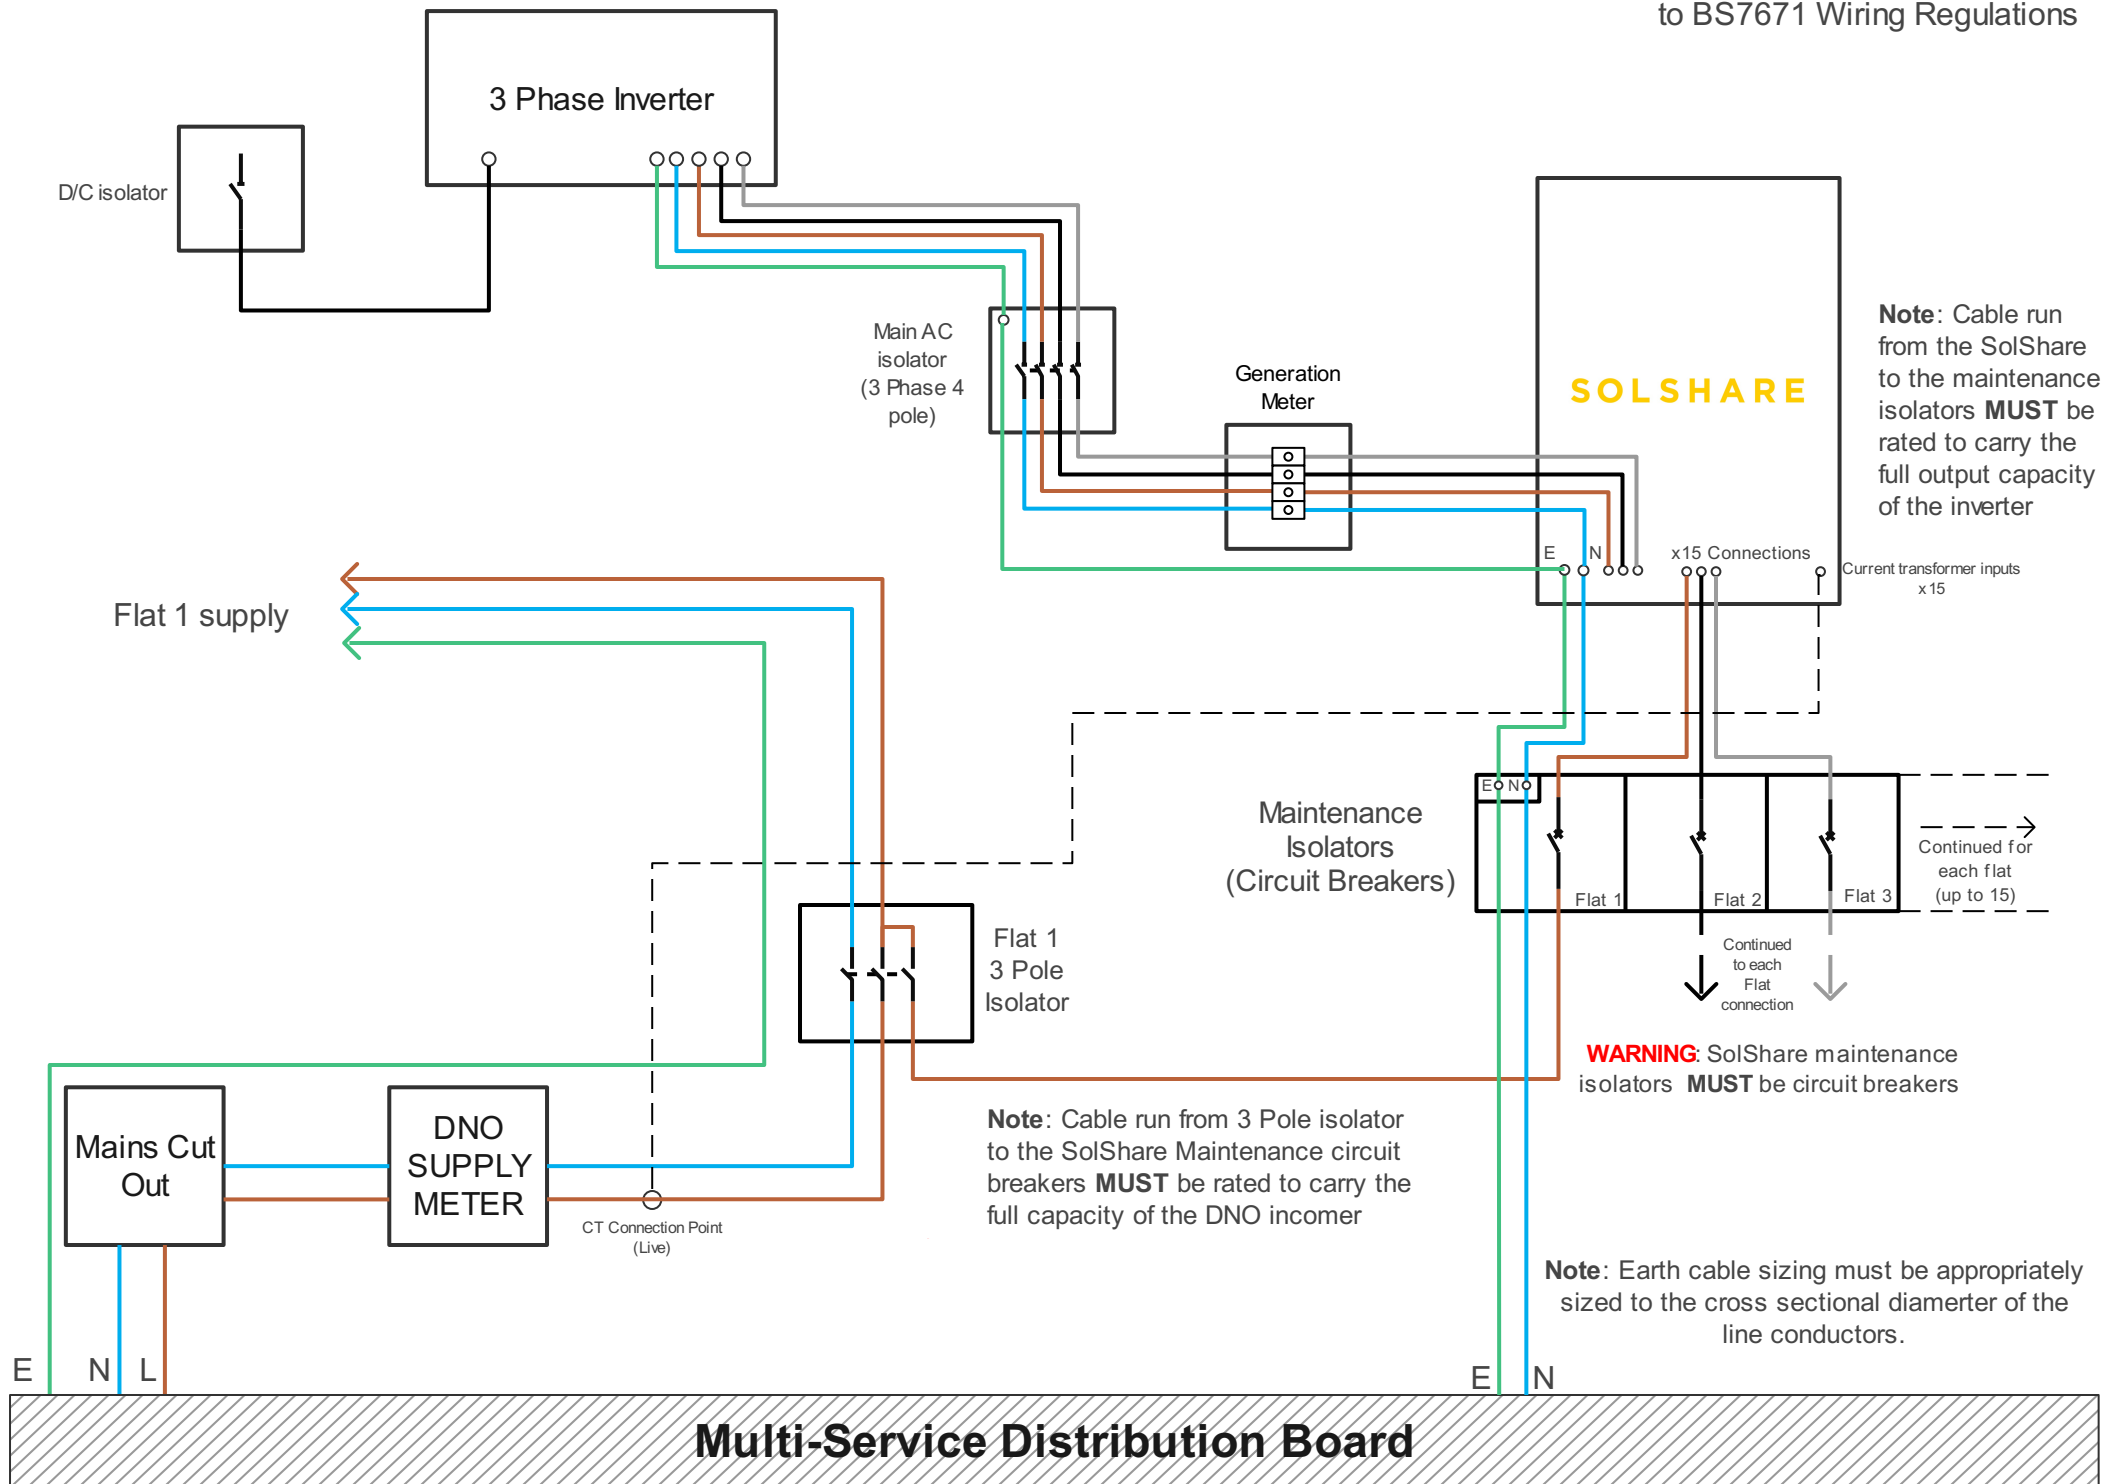

**Note:** Cable run from the SolShare to the maintenance isolators **MUST** be rated to carry the full output capacity of the inverter

**Note:** Cable run from 3 Pole isolator to the SolShare Maintenance circuit breakers **MUST** be rated to carry the full capacity of the DNO incomer

**WARNING:** SolShare maintenance isolators **MUST** be circuit breakers

**Note:** Earth cable sizing must be appropriately sized to the cross sectional diameter of the line conductors.