

## SolShare Fused Isolator SLD **Example GUIDANCE ONLY**

GUIDANCE NOTE: Installation must fully conform to BS7671 Wiring Regulations

## **Typical install Locations:**

installed

E

Flat

**Mains** 

Fuse Cut

Out


Energy meters in risers Co located energy meters (plant room)

not sized large enough, additional fusing must be

DNO

**SUPPLY** 

METER

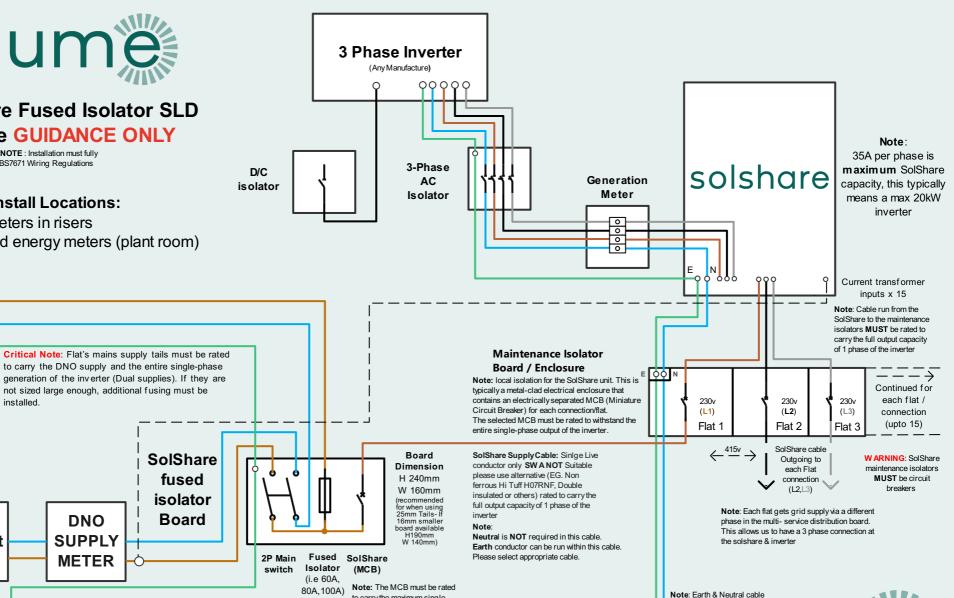

(Live) Note: If CT cables requires extending-Sutiable cable: 0.25mm (24AWG) Belden 2 core shielded. Please ground cable shielding to Earth inside SolShare. MAX DISTANCE

**CT Connection Point** 

**SolShare** 

fused

isolator

**Board** 

to carry the maximum singlephase output of generation from the inverter. (The cable size must also be rated to handle this load.)

sizing must be appropriately sized to the line conductors supplying the inverter.

Ε Connected Connected to to M.E.T Neutral in MSDB



## Multi-Service Distribution Board (MSDB)